
- 5 From the recommended apps, select "Camera Importer". The app will automatically start and allow you to import photos and movies to your smartphone.
 - If the message "There is no MTP device connected" appears on the app, please try again from step 3.

For Customers Using iOS

Use a camera adapter. Given that the camera is equipped with a USB Type-C connector, you will need to supply a cable with a USB Type-A connector for connection to the camera adapter.

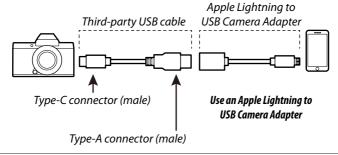

- 1 Select POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
- 2 Select USB CARD READER for CONNECTION MODE.
- 3 Connect the camera and smartphone using a USB cable. Launch the Photos app to import photos and movies to your smartphone.
- A Type-C to Type-C USB cable is required for connection to iPad and other devices equipped with USB Type-C connectors.
 - The desired results cannot be achieved with a USB Type-C-to-Lightning cable. Use a camera adapter.