
## Flash Settings

The following settings are available with the built-in flash.

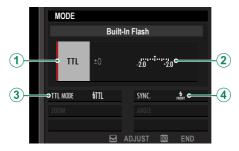

| Setting               | Description  |
|-----------------------|--|
| ① Flash control mode  | Choose from the following options:  • TTL: TTL mode. Adjust flash compensation (②) and choose a flash mode (③).  • M: The flash fires at the selected output (②) regardless of subject brightness or camera settings. Output is expressed in fractions of full power, from ½ to ½4. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results.  • ME (primary flash): Choose if the flash is being used as a primary flash controlling secondly flash units, for example as part of a studio flash system.  • ③OFF (OFF): The flash does not fire. |
| 2 Flash compensation/ | Adjust flash level. The options available vary with the flash  |
| output                | control mode ((1)).  |